



**NOTES**

1. ALL 400A METERBASES MUST BE PURCHASED FROM LUS.
2. THE NEUTRAL WIRE MUST BE A CONTINUOUS RUN OF CONDUCTOR. IT CANNOT BE BROKEN OR TERMINATED ON THE NEUTRAL BUS. THE NEUTRAL WIRE MUST BE STRIPPED FOR CONTACT WITH THE NEUTRAL LUG. THE NEUTRAL WIRE MUST EXTEND A MINIMUM OF 18" FROM THE INITIAL NEUTRAL LUG.
3. THE CUSTOMER MAY USE ANY OF THE REMAINING METERBASE ENTRANCE HOLES EXCLUDING THE ONE NOTED ON THE BOTTOM LEFT OF THE METERBASE. CUSTOMER MUST LEAVE ADEQUATE SPACE FOR LUS TO INSTALL THE SERVICE WIRES.

**WIRING GUIDELINES FOR  
400A METERBASE**

SCALE: NOT TO SCALE	DATE: 01-06-2017	
DRAWN BY: BRADY T. ALLRED		SHEET NO. 1

**LAWRENCEBURG UTILITY SYSTEMS**

1607 N LOCUST AVENUE  
LAWRENCEBURG, TN 38464  
(931) 762-7161